1 Connect

Before connecting

Select the most suitable connection (A or B or C) based on the type of device you have and your home set up.
You can also refer to the accompanying User Manual for other possible connections.

A Connecting Recorder and TV
with antenna only

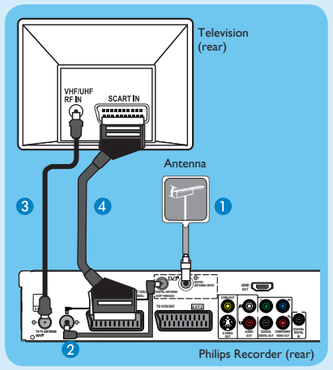

1. Unplug the existing antenna cable from your TV and connect it to the **DIGITAL ANTENNA INPUT** socket on this recorder.
2. Connect the Tuner interlink cable (supplied) between **DIGITAL ANTENNA LOOP THROUGH** and **ANALOG ANTENNA INPUT** sockets on this recorder.
3. Connect the RF antenna cable (supplied) from the **TO TV ANTENNA INPUT** socket on this recorder to the Antenna In socket on the TV.
4. Connect a scart cable (supplied) from the **EXT1-TO TV** scart socket on this recorder to the SCART socket on your TV.
5. Plug in the power cable from the recorder to an AC power outlet.

B Connecting Recorder and TV
with Cable TV and Digital TV antenna (optional)

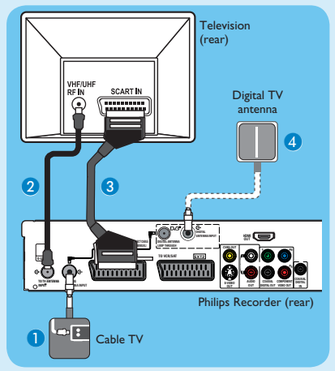

1. Unplug the existing cable TV antenna from your TV and connect it to the **ANALOG ANTENNA INPUT** socket on this recorder.
2. Connect the RF antenna cable (supplied) from the **TO TV ANTENNA INPUT** socket on this recorder to the Antenna In socket on the TV.
3. Connect a scart cable (supplied) from the **EXT1-TO TV** scart socket on this recorder to the SCART socket on your TV.
4. If you have a Digital TV antenna, connect it to the **DIGITAL ANTENNA INPUT** socket on this recorder (optional).
5. Plug in the power cable from the recorder to an AC power outlet.

Note No digital channels will be found if the digital antenna is not connected to this recorder.

C Connecting Recorder, TV and Cable Box/Satellite Receiver

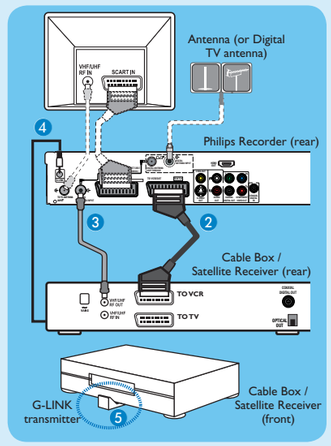

1. Follow steps 2~4 from type B connection.
2. Connect another scart cable (not supplied) to the **EXT2-TO VCR/SAT** scart socket on this recorder to the SCART (TO TV) socket on your Cable Box/Satellite Receiver.
3. Connect an antenna cable (not supplied) from the **ANALOG ANTENNA INPUT** socket on this recorder to the Antenna Output socket on the Cable Box/Satellite Receiver.
4. Connect the G-LINK cable to the **G-LINK** socket on this recorder.
5. Place the G-LINK transmitter in front of your Cable Box/Satellite Receiver near to its IR sensor.

Note No digital channels will be found if the digital antenna is not connected to this recorder.

2 Set up

A Finding the viewing channel

1. Press **STANDBY-ON** on the recorder.
2. Turn on the TV.
   You should see the installation menu.

3. In case you don't see the recorder's setting menu, press the Channel Down button on the TVs remote control repeatedly (or AV, SELECT, button) until you see the menu. This is the correct viewing channel for the recorder.

B Start initial installation

Use the recorder's remote control and follow the on-screen instructions to complete the installation.

1. Select the desired menu language, your country and the TV shape.

   Note Press **OK** or the **Green** button on the remote control to go to the next screen.

2. When the { Channel Search } menu appears, select the type of tuner to install and press the **Green** button.

   Note If { No TV install } is selected, only recordings from external sources will be possible.

3. Once complete, press the **Green** button to continue.



4. Enter the correct time in the entry field, press the **Green** button to continue. Proceed the same for date entry.
5. To continue with the GUIDE Plus+ installation, press the **Green** button.

- Otherwise, press the **Red** button to skip.

C Install the GUIDE Plus+ system



- Follow the on-screen instructions to select your language, country and enter the postal code of your area.

  Note If no or wrong postal code is entered, it will cause no GUIDE Plus+ (EPG) service information.

D Install the external receiver

If you do not have an external receiver connected to the recorder, skip '**D**' and go to '**E**'.

1. Select 'External Receiver 1' and press **OK**.
2. Select the type of reception, service provider and brand name of the external receiver, followed by the recorder socket used to connect the external receiver (e.g. 'EXT2' for 'EXT2-TO VCR/SAT').

   Note Press **OK** to go to the next screen.
   Select { None } if none of the entries are applicable.

3. Once complete, turn on your external receiver and select channel number 02 on the external receiver.
4. Read the instructions on the TV and press **OK**.
5. If the external receiver has switched to the same programme number as displayed on the TV, select { Yes } in the menu and press **OK**. Otherwise, select { No } and press **OK** to try a different code.
6. Your external receiver is now installed. Press the **Green** button to continue.
7. Go to { Host Channel Setup } to select the host channel for your external receiver.

E Load the TV listing data

1. Press **TIMER (GUIDE Plus+)** to exit GUIDE Plus+ system.
   Leave the recorder in 'standby' mode and turn 'on' the external receiver overnight to collect the TV listing data, this may take up to 24 hours.
2. Check the { Editor } screen the next day to ensure the source and programme numbers are matching for all channels.

3 Enjoy

About the Time Shift Buffer (TSB)

Once you turn on the recorder, the selected TV programme will be stored in a temporary hard disk storage called Time Shift Buffer '**TSB**'. The '**TSB**' can store up to 6 hours of programmes temporarily.

Press **INFO** to display the Time Shift video bar.

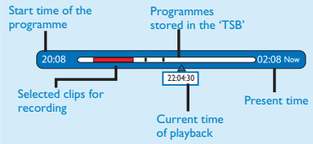

Note The contents in the time shift video bar will be cleared when you press **STANDBY ON** ( ).

Watch TV – Pause live TV

Your Philips Recorder allows you to control the TV programme. You can PAUSE it as if you were in control of the live broadcast.

1. Turn on your recorder to the live TV mode and press **P** +/– to select a TV programme.
2. Press **PAUSE LIVE TV** to suspend it.
3. Press **PAUSE LIVE TV** again to continue.
4. To return to live broadcast, press **LIVE TV**.

About the internal hard disk drive

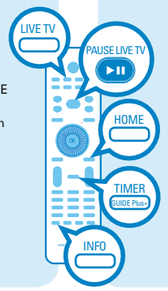

This recorder's hard disk drive can be used as a Media Jukebox, allowing you to store and playback your TV programmes, videos, music and photos files.

Press **HOME** on the remote control to access your contents stored in the { Hard Disk }.

3 Enjoy

Record to hard disk

A Record current TV programme

1. Press **REC** to start recording. It can record up to 6 hours.

Note To set the recording time length, press **REC** repeatedly to extend the recording time in 30-minute increments, up to 6 hours.

2. To stop the recording before the scheduled time, press **STOP**.

B Mark a specific segment in the Time Shift Buffer for recording

1. Rotate the rotary wheel to the left or right to search for the scene where you want to record.
2. Press **REC** to mark the recording from here.
3. Rotate the rotary wheel again until you find the scene where you want to stop recording, press **STOP** to mark it.

Notes
- Pressing the **Red** button will cancel the recording.
- The title will be marked in red and the recording will only take effect when you turn off the recorder.
- Marking of recording can be done forward or backward within the Time Shift Buffer.

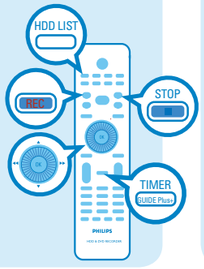

C Using the GUIDE Plus+ system

Make sure that the GUIDE Plus+ TV listing data download is completed.

1. Press **TIMER (GUIDE Plus+)**.
It shows the list of TV programmes that are currently broadcast and the next 8 days of TV programmes.

2. Press ▼ **down** to select a TV channel.

Notes
– To see an overview of all the available channels, press the **Yellow** button on the remote control.
– To go directly to the previous day's or the next day's TV listing, press I◀◀ / ▶▶I.
– To scroll up or down a page, press **P** +/−.

3. Press ◀ **left** or ▶ **right** to select a TV programme.
4. Press the **Red** button on the remote control to set the highlighted programme for recording.

Note You can store up to 25 programmes for recording.

Copy TV programmes or files

A Copy TV programmes from hard disk

1. Insert a recordable DVD into the recorder.
2. Press **HDD LIST** on the remote control.
3. Select a title to copy and press the **Green** button on the remote control for { **Copy** }.
4. The making disc copy information appears. Press the **Green** button again to start copying.

Note It is not possible to copy the TV recordings to USB device.

B Copy files from USB

You can only copy the data files (MP3, WMA, DivX and JPEG) from your USB device to the recorder's hard disk drive or recordable DVD.

1. Insert your USB device to the USB socket at the front panel of the recorder.
2. Press **USB** on the remote control.
3. Use the cursor keys to reach the file you want to copy.
4. Press the **Green** button for { **Copy** }.



5. Select the destination for copying and press **OK**.

Note If select { To Disc }, insert an empty recordable DVD into the recorder.

6. Press **OK** again to start copying.

C Copy files from Disc

Copy prohibited contents cannot be copied to this recorder.

1. Insert a CD/DVD into the recorder.
2. Press **HOME** and select { **Disc Tray** }.
3. Use the cursor keys to reach the title/file you want to copy.
4. Press the **Green** button for { **Copy** }.



5. Select the destination for copying and press **OK**.

Note Only data files are able to copy to USB device.

6. Press **OK** again to start copying.

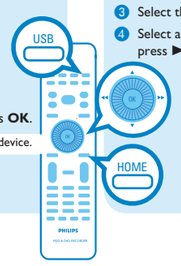

Start playback

A Playback from hard disk

1. Press **HOME**.

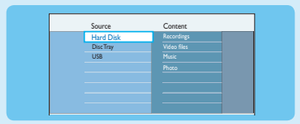

2. Select { **Hard Disk** } and press ▶ **right**.
3. Select the contents type and press ▶ **right**.
4. Use the cursor keys to reach the title/file you want to play and press ▶II to start playback.

B Playback from disc

1. Hold down **STOP** until the disc tray opens. Load a disc and close the disc tray.
2. Press **HOME** and select { **Disc Tray** }.
3. Use the cursor keys to reach the title/file you want to play and press ▶II to start playback.

C Playback from USB device

1. Insert the USB device to the USB socket.
2. Press **USB** to show the contents list.
3. Select the contents type and press ▶ **right**.
4. Select a data file (MP3, WMA, DivX and JPEG) and press ▶II to start playback.

Need help?

GUIDE Plus+ system
Go to www.europe.guideplus.com

User Manual
See the user manual that comes with your Philips Recorder

Online
Register your product and get support at www.philips.com/welcome

Be responsible
Respect copyrights

2007 © Koninklijke Philips N.V.
All rights reserved.
12 NC 3139 245 28751
www.philips.com

Hard Disk / DVD Recorder

DVDR5520H
DVDR5570H

Quick Start Guide

1 Connect
2 Set up
3 Enjoy

What's in the box?

Hard Disk/ DVD Recorder

Remote Control and 2 batteries

RF antenna cable (connect between recorder and TV)

Scart cable

Tuner interlink cable

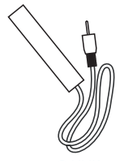

G-LINK transmitter cable

User Manual

PHILIPS